


Quick Reference Guide


Parts Descriptions

VE-CVC02L Base Unit

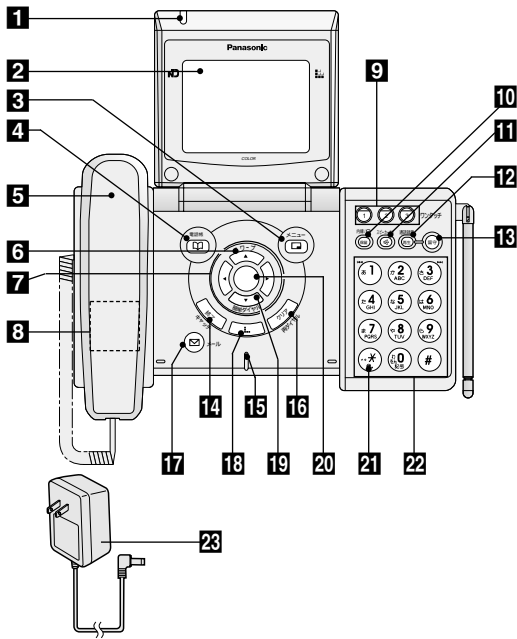

- 1** L lamp
- 2** Angle-adjustable display
- 3** Menu key
- 4** Directory key
- 5** Handset
- 6** L warp key
- 7** Navigation keys
- 8** Speaker
- 9** One-touch keys
- 10** Hold/Extension/Return key
- 11** Speakerphone key · lamp
- 12** Playback/Voice record key
- 13** Voice message key · lamp
- 14** Call waiting/Cancel key
- 15** Microphone
- 16** Re-dial/Clear key
- 17** Mail key
- 18** L key
- 19** Simple dial key
- 20** OK key
- 21** Asterisk key (to switch to DTMF tone)
- 22** Numeral/Character keys
- 23** AC adaptor for VE-CVC02L

VE-CS210A Personal Phone

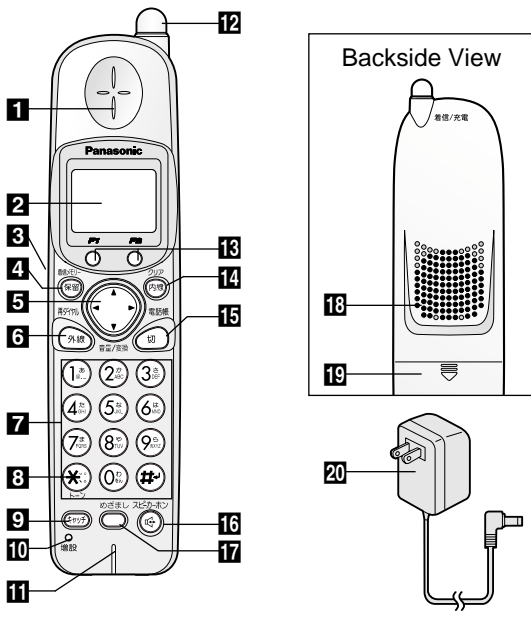

- 1** Earpiece
- 2** Display
- 3** Talk key
- 4** Hold/Call log key
- 5** Navigation/Re-dial/Directory keys
- 6** Send/Answer key · lamp
- 7** Numeral/Character keys
- 8** Asterisk key (to switch to DTMF tone)
- 9** Call waiting key
- 10** Personal phone registration key
- 11** Microphone
- 12** Call/Charge indicator
- 13** F1/F2 key
- 14** Extension/Clear key
- 15** End key
- 16** Speakerphone key · lamp
- 17** Alarm key
- 18** Speaker
- 19** Battery cover
- 20** AC adaptor for VE-CS210A

注) 日本国内専用です。電圧、電話交換方式、電波法などの異なる海外では使用できません。

CAUTION: These telephones are for use in Japan only. They cannot be used in other countries because of differences in voltages, telephone switching system and radio regulation laws.

Basic Operations

Base unit (VE-CVC02L)



■ To make a call

Lift the handset. → Dial.

■ To receive a call

When the phone rings... → Lift the handset.

■ To make a call using the speakerphone (Hands-free talk)

Dial. → Press **スピーカホン** (11). → Talk to the microphone.....
To end the call, press **スピーカ**.

■ To receive a call using the speakerphone (Hands-free talk)

When the phone rings... → Press **スピーカホン** (11).
→ Talk to the microphone.....To end the call, press **スピーカホン**.

■ To place the current call on hold

Press **保留** (10) during a call.

■ To retrieve the held call

- During a call through your handset, press **保留** (10) again.
If you have returned the handset on the base unit, lift the handset.
- During Hands-free talk, press **スピーカホン** (11).

■ To transfer the held call to the personal phone

Press **保留** (10) during a call. → Press **1** - **4** (Extension No.). → Place the handset on the base unit when the other party answers.
(Call transfer is completed after the other party presses **外線**.)

■ To set a calendar

With the handset placed on the base unit, press **メニュー** - **2** - **0**.
→ Enter the year. → Enter the month in 2 digits and date in 2 digits (Press **0** - **1** - **0** - **1** for January 1st, for example).
→ Enter the time in 4 digits. (Press **2** - **3** - **3** - **0** for 11:30 P.M., for example). → Press **メニュー** (8).

■ To use TAM (Telephone Answering Machine)

Set the calendar beforehand.

When you leave home, press **留守** (18) to turn on the lamp.
(To deactivate, press **留守** again to turn off the lamp.)

→ When receiving a call while TAM is activated, it answers the call automatically in Japanese, and records the incoming messages.

Then, the **留守** lamp starts flashing. → When you return home, press **留守** to play back the messages.

The **留守** lamp turns off and the answering mode is deactivated.
To play back the message while TAM is deactivated, press **再生** (12).

*Up to 59 messages can be recorded for 10 minutes in total.

■ To hear recorded messages while away from home (Remote control)

Preparation before you leave home

Store a remote control number.

With the handset placed on the base unit, press **メニュー** - **2** - **1**.
→ Enter the desired 4-digit number. → Press **メニュー**.

When you leave home, press **留守** to turn on the lamp.

To hear messages

Dial your home phone number. → While the outgoing message is played back... → Enter your remote control number.

→ Announcement → Press **2**. → You will hear recorded messages if any.

NOTE

- This operation can be made only from telephones which can send DTMF signals.

Personal phone (VE-CS210A)



■ To make a call

Lift the personal phone from the charger or press **外線** (6).
→ Dial.....To end the call, place the personal phone on the charger or press **切** (15).

■ To receive a call

When the phone rings... → Lift the personal phone from the charger or press **外線**. → Talk.....To end the call, place the personal phone on the charger or press **切**.

■ To make a call using the speakerphone (Hands-free talk)

Lift the personal phone from the charger and press **切**. → Dial. → Press **スピーカホン** (13). → Talk to the microphone.....To end the call, place the personal phone on the charger or press **切**.

■ To receive a call with the speakerphone (Hands-free talk)

When the phone rings... → With the personal phone placed on the charger, press **スピーカホン** or **外線**.
→ Talk to the microphone.....To end the call, press **切**.

■ To place the current call on hold

Press **保留** (4) during a call.

■ To retrieve the held call

Press **外線**.

■ To transfer the held call to the base unit

Press **内線** (14) during a call. → Press **0**.
→ Place the personal phone on the charger, or press **切** when the other party answers.(Call transfer is completed after the other party goes on-hook and off-hook.)

■ To transfer the held call to another personal phone

Press **内線** (14) during a call. → Press **1** - **4** (Extension No.). → Press and hold **トーク** (9) until the Speakerphone lamp lights. → Press and hold **トーク** until you finish talking. → Place the personal phone on the charger, or press **切** when the other party answers.
(Call transfer is completed after the other party presses **外線**.)
*Each party can speak by pressing **トーク**. Note that simultaneous speech is not possible. Only one party may speak at a time.

■ To set an alarm

This is a one-time alarm setting.

Please set the alarm each time you need it.

Lift the personal phone from the charger and press **切**.

→ Press **めざまし** (17). → Enter the time in 4 digits (Press **0** - **7** - **3** - **0** for 7:30 A.M., for example).

→ Press **F1** (18). → Select the tone. (Press **0** (15) for alarm tone or press **0** (15) for ringing tone.) → Press **F1**.

*“(□)” appears on the display.

- The number after the button shows the location of the button described in the previous page.