


Quick Reference Guide


Parts Descriptions

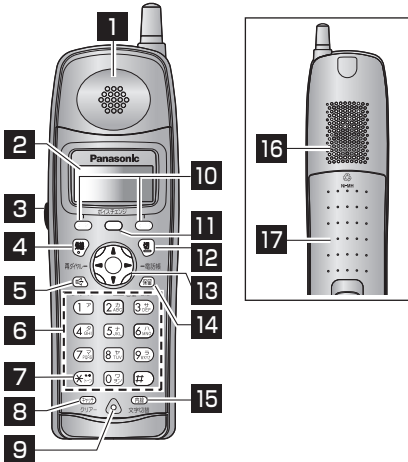


Personal Phone

Backside View

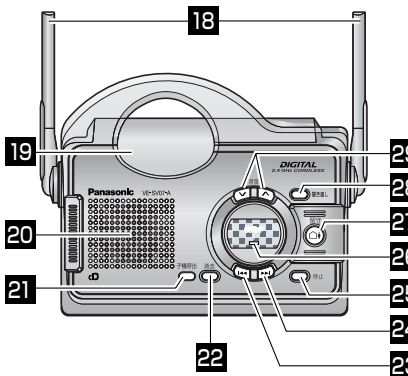

Base Unit




- 1 Earpiece
- 2 Liquid crystal display
- 3 Headset jack
- 4 Talk button
- 5 Speakerphone button
- 6 Numeral/Character buttons
- 7 Tone button (to switch to DTMF tone)
- 8 Flash/Clear button
- 9 Microphone
- 10 Multi-operation buttons
- 11 Voice change button
- 12 Off button
- 13 Redial button ()
- Phone book button ( 電話帳)
- Volume control button ()
- 14 Hold/Caller ID button
- 15 Intercom/Text entry mode button
- 16 Speaker
- 17 Battery cover
- 18 Antennas
- 19 Charger
- 20 Speaker
- 21 Page button
- 22 Erase button
- 23 Repeat button
- 24 Skip button
- 25 Stop button
- 26 In Use indicator
- 27 Auto answer button & indicator
- 28 Playback button
- 29 Volume control buttons


■本機は日本国内用です。国外での使用に対するサービスは致しかねます。
 ■This product is designed for use in Japan.
 Panasonic cannot provide service for this product if used outside Japan.

Basic Operations



Personal phone

■ To make a call

Lift the personal phone from the base unit and press  (**4**).

→ Dial.....To end the call, place the personal phone on the base unit or press  (**12**).

■ To receive a call

When the phone rings... → Lift the personal phone from the base unit or press  . → Talk.....To end the call, place the personal phone on the base unit or press  .



■ To place the current call on hold

Press  (**14**) during a call.




■ To retrieve the held call

Press  or  .

■ To make a call using the speakerphone (Hands-free talk)

Press  (**5**). → Dial. → Talk to the microphone.....To end the call, place the personal phone on the base unit or press  .

■ To receive a call with the speakerphone (Hands-free talk)

When the phone rings... → With the personal phone placed on the base unit, press  or  .
→ Talk to the microphone.....To end the call, press  .


■ To hear recorded messages while away from home (Remote control) Preparation before you leave home

Store a remote control number.

Press  (**F1**)     .

→ Enter the desired 4-digit number.

→ Press  (**F1**) .

When you leave home, press  (**留守**) .
(The Auto answer indicator on the base unit turns on.)

To hear messages

Dial your home phone number. → While the outgoing message is played back...

→ Enter your remote control number.

→ Announcement → Press  (**2**) .

→ You will hear recorded messages if any.

NOTE

- This operation can be made only from telephones which can send DTMF signals.

Base unit


■ To use TAM

(Telephone Answering Machine)


When you leave home, press  (**留守**) (**27**) .


(The Auto answer indicator (**27**) on the base unit turns on.)

→ When receiving a call while TAM is activated, it answers the call automatically in Japanese, and records the incoming messages. Then, the Auto answer indicator on the base unit starts flashing.

→ When you return home, press  (**留守**) to play back the messages.

The Auto answer indicator turns off and the answering mode is deactivated.

To erase the message, press  (**消去**) (**22**) while listening to the message you want to erase.

To play back the message while TAM is deactivated, press  (**聞き直し**) (**28**) .

*Up to 50 messages can be recorded for approx. 12 minutes in total.

- The number after the button shows the location of the button described in the previous page.