

Panasonic

Getting Started

Wireless Monitor Station
Model No. **VL-WD613**



English

Polski

Română

Magyar

Table of Contents

Introduction	2
Accessory information	2
General information	2
For your safety	3
Important safety instructions	4
Other important information	4
Battery installation	5
Charging the sub monitor	5
Wall mounting	5
Registering the product to the Video Intercom System	6
Cleaning	6
Specifications	6

Thank you for purchasing a Panasonic product.

Please read this manual before using the product and save it for future reference.

Introduction

This product is an additional product designed to be used with the following Panasonic Video Intercom Systems.

- VL-SWD501/VL-SWD501U (Main monitor station: VL-MWD501)

(The corresponding models are subject to change without notice.)

You must register this product with your Video Intercom System before it can be used.

- This manual describes only the steps needed to register and begin using the product. Please read the Operating Instructions of the Video Intercom System for further details.
- The illustrations in the supplied manual(s) may vary slightly from the actual product.

Product names used in this manual

Model No.	Product name	Name in this manual
VL-MWD501	Main monitor station	Main monitor
VL-WD613	Wireless monitor station	Sub monitor

- In this manual, the suffix of each model number (e.g., the "FX" in "VL-WD613FX") is omitted.

Accessory information

Supplied accessories

Accessory item	Quantity
AC adaptor/PNLV226CE	1
Rechargeable batteries *1	2
Charger	1

*1 Please read the Operating Instructions of the Video Intercom System for information about replacement batteries.

Note:

- You will need the following additional items (locally procured) to install the charger on the wall.
 - Screws x 2 (for wall mounting):
Prepare the screws according to the material, structure, strength and other factors of the mounting area and the total weight of objects to be mounted.
- Please read the Operating Instructions of the Video Intercom System for additional/replacement accessories.

General information

 
- In the event of problems, you should contact your equipment supplier in the first instance.
- Please read the "General Information" section in the Operating Instructions of the Video Intercom System for information regarding R&TTE Directive.
- Please read "Ecodesign information" section in the Operating Instructions of the Video Intercom System for information regarding ErP directive.

For your future reference

We recommend keeping a record of the following information to assist with any repair under warranty.

Serial No.	Date of purchase
(found in the battery compartment of the product)	
Name and address of dealer	

Attach your purchase receipt here.



For your safety

To prevent severe injury and loss of life/property, read this section carefully before using the product to ensure proper and safe operation of your product.



Preventing fire and electric shock

- Use only the power source marked on the product. If you are not sure of the type of power supplied to your home, consult your dealer or local power company.
- Use only the specified AC adaptor.
- Do not attempt to disassemble or modify this product. Contact an authorised service centre for repairs.
- Never touch the AC adaptor with wet hands.
- Do not perform any actions (such as fabricating, twisting, stretching, bundling, forcibly bending, damaging, altering, exposing to heat sources, or placing heavy objects on the AC adaptor) that may damage the AC adaptor. Using the product with a damaged AC adaptor may cause electric shock, short circuits, or fire. Contact an authorised service centre for repairs.
- Do not overload the power outlet above the specified levels. Overloading by having many connections on one power outlet may cause heat generation, resulting in a fire.
- Never put metal objects inside the product. Never spill any liquid on the product. If metal objects enter the product or the product becomes wet, unplug the product from the power outlet and contact an authorised service centre.
- Do not use a microwave oven or other devices, such as electromagnetic cookers, to speed up the drying process of any parts of the product.
- Completely insert the AC adaptor into the power outlet. Failure to do so may cause electric shock and/or excessive heat resulting in a fire. Do not use damaged AC adaptors or power outlets.
- Regularly remove any dust, etc., from the AC adaptor by unplugging it from the power outlet, then wiping it with a dry cloth. Accumulated dust may cause an insulation defect from moisture, etc., resulting in a fire.
- Unplug the product from the power outlet if the product emits smoke, an abnormal smell or makes unusual noise, or if the product has been dropped or physically damaged. These conditions can cause fire or electric shock. Confirm that smoke has stopped emitting and contact an authorised service centre.

- Hold the main body (not the metal parts) of the AC adaptor when unplugging it. Unplugging the AC adaptor while holding its cord or the cord's plugs may result in fire, electric shock, or injury.

Preventing accidents

- Do not use the product in health care facilities if any regulations posted in the area instruct you not to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF (radio frequency) energy.
- Do not install or use this product near automatically controlled devices such as automatic doors and fire alarms. Radio waves emitted from this product may cause such devices to malfunction, resulting in an accident.
- Consult the manufacturer of any personal medical devices, such as pacemakers or hearing aids, to determine if they are adequately shielded from external RF (radio frequency) energy. (The product operates in the frequency range of 1.88 GHz to 1.90 GHz, and the RF transmission power is 250 mW (max.).)



Preventing fire and electric shock

- Do not use the product in areas that are exposed to rain, moisture, steam, or oily smoke, or areas that have excessive dust.

Preventing accidents, injuries, and property damage

- Do not use the product in unstable areas or areas prone to strong vibrations. This may cause the product to fall, resulting in damage to the product or injury.
- Do not put your ear(s) near the speaker, as loud sounds emitted from the speaker may cause hearing impairment.
- Do not place coins or other metal objects in the charger. Metal objects may become hot, causing burns.
- Do not place magnetic cards or other devices that store data magnetically (such as credit cards) near the charger. Failure to do so may make the cards or devices unusable.

Sub monitor batteries

Preventing leakage, heat generation, rupture, or accidents

- We recommend using the batteries noted on the Operating Instructions of the Video Intercom System. USE ONLY rechargeable Ni-MH batteries AAA (R03) size.

